

## Overhead Demo Mirror Assembly

1 of 3

**Kit includes:**

- (1) MirrorLite mirror OHD marked with two red tapes near center of short side
- (2) black metal clamps with silver clamp slide rod
- (1) pack or bag of tripod stands and crossbar

**Tools Required:** One  $\frac{7}{16}$ " open-end wrench

**1** Carefully unpack mirror, leaving protective plastic wrap on face of mirror. We suggest using the flat shipping box as a work surface in order to prevent pressing against mylar mirror face.

**2** Line up  $\frac{1}{4}$ " - 20 machine studs into holes by red tape. **3** Evenly screw down base of bracket.




**4** Repeat for other side of mirror.

**5** Assemble crossbar.

**6** Use wrench to lock nut against frame so clamp body is parallel to mirror side.



**7** Lay crossbar into clamp jaws and gently tighten clamp. Do not crush X-bar.

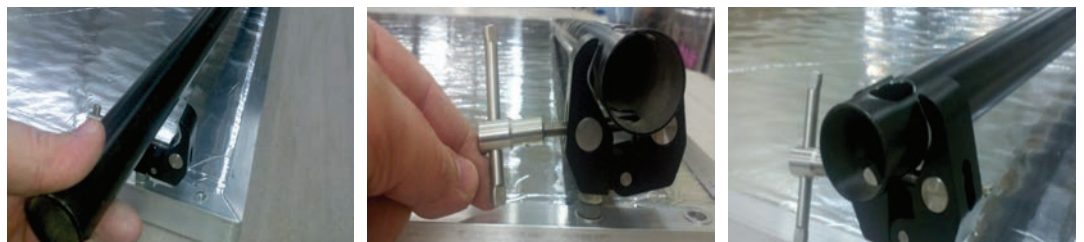

---

## Overhead Demo Mirror Assembly

---

2 of 3

### Overhead Demo Mirror Support

**Kit includes:**

- (2) support stands
- (4) crossbar sections
- (1) carrying case



**1** Loosen the wing nut at the top of the support stand legs.



**2** Expand the legs so that the support stand will stand up on its own .



**3** Tighten the wing nut.



**4** Open the flip locks on the light stand joints to allow the MirrorLite stand sections to move freely. Raise and lower the sections of the stand to the desired height, and close the flip locks to hold the sections in place. At this point, the support stand should stand on its own at your desired height.

Repeat steps 1 through 4 for the second support stand.



---

## Overhead Demo Mirror Assembly

---

3 of 3

### Overhead Demo Mirror Support

**5** Slide the silver end of a support bar section into the wider end of another support section.

**6** Rotate the support bar sections until the arrows on the white labels line up. Repeat step 5 for the other support bar sections until you have a completed bar. NOTE: If the arrows are not aligned properly, the background support system will not be stable.



**7** Remove the wing nut at the top of both support stands.

**8** Place the assembled crossbar onto the tops of the support stands.

**9** Replace the wing nut at the top of the support stands and tighten until the crossbar is secure.



**Your MirrorLite support system is now setup and ready for use.**