
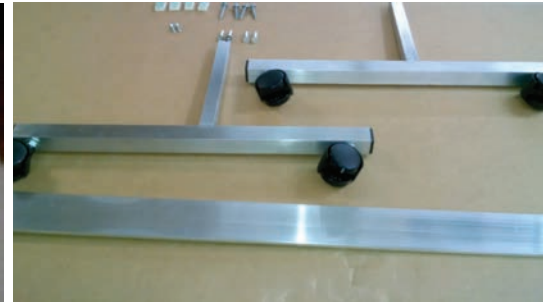


Stackable Stand (Vertical) Assembly 1 of 2

Kit includes:

- (4) 10 - 24" x 1 1/2" round head screws
- (2) #8 - 18 x 1" flat head screws
- (4) 1/4 - 20 x 1" flat head screws
- Foam pads
- (2) tee stands
- (1) bumper bar

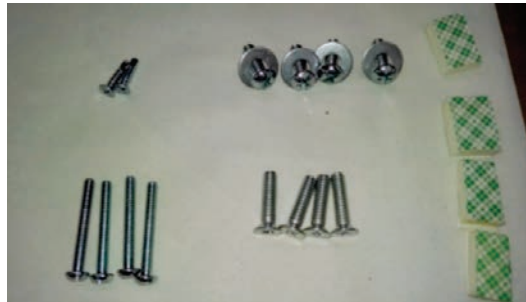

- 1 Attach foam pads above and below mirror mounting holes on T-stands.



- 2 Locate "Bumper Bar" and 1/4" flathead screws. Place round corner outwards above threaded inserts on T-stands stop with counter sinks facing up.




Stackable Stand (Vertical) Assembly 2 of 2

- 3** Peel back mirror protective film from threaded inserts indicated by red tape flags at corner of mirrors to connect to stand. Start the 10-24 x 1-1/2" screws by hand to find the threads, then tighten with driver on medium clutch setting to prevent stripping screws.



- 4** Carefully tip the mirror and stand on its side, showing the bottom of the bumper bar. Drill drive the #8-18 flat head screws in the countersunk holes on bumper bar. Do not over tighten or strip. Set clutch on drill half the full strength setting.

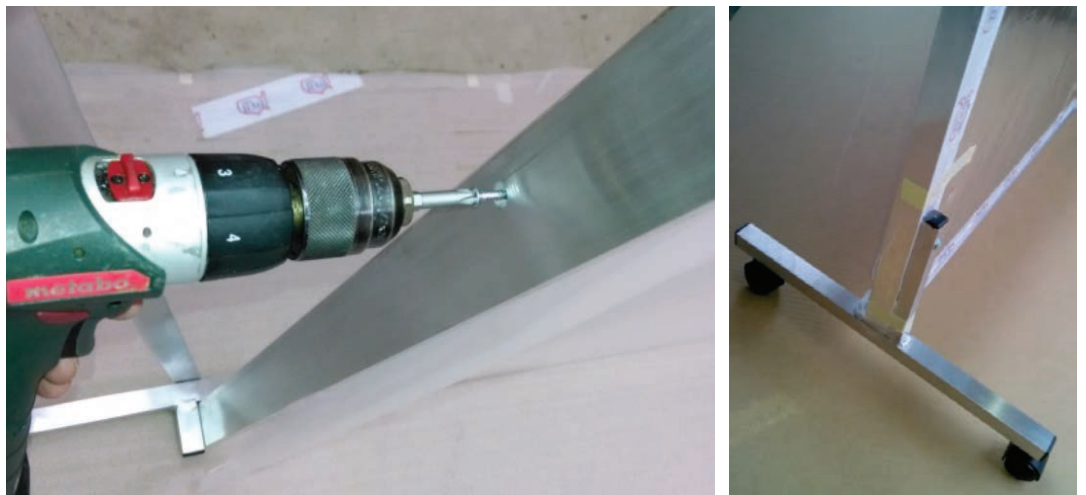

Complete mirror.